


# Quick Start Guide E110-W

### Connectors on the back (left to right):

- HDMI out (with embedded audio)
- analog audio out (headset)
- serial port
- 12V power in (7 .. 17V)

#### Connectors on the front (left to right):

- · analog audio in
- HDMI in (with embedded audio)
- 10/100 Ethernet
- USB-2.0 (bottom: E110 USB port)
- USB-2.0 (top: W100 USB port)

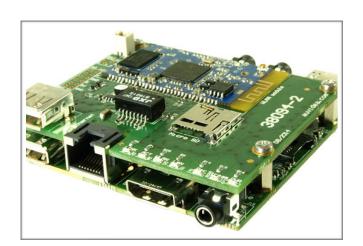

## Setup

- connect a HDMI video source to HDMI in
- · connect a HDMI monitor to HDMI out
- · mount the WLAN antenna
- connect a 12V power supply the system will now power up the front LEDs light up
- after approx. 1.5 min the monitor will show the video from the HDMI video source
- use a computer with 2.4GHz Wifi (DHCP): SSID auvidea, password: auvidea12
- IP address W100 (LuCl interface): 192.168.2.1 (user: root, password: auvidea)
- IP address of E110 web interface: 192.168.2.160
- please enter the URL "http://192.168.2.160" in a browser window
- · this brings up the web based GUI and the link to the manual
- Ethernet: DHCP slave WAN interface for W100 (ffmpeg output only, no E110 access)

## **FFMPEG**

- plug in USB stick with ffmpeg in upper USB port before powering up (do not remove)
- start RTSP stream first in the E110 web interface
- computer: start ssh console (IP: 192.168.2.1, user: root, password: auvidea)
- cd /mnt/E110/ffmpeg/bin
- ./ffprobe <u>rtsp://192.168.2.160:554/stream</u> (retrieve properties of RTSP stream)
- ./ffmpeg .... (please refer to the ffmpeg streaming guide)

#### Hints

- please read the manual
- do not unplug the video source while recording or streaming

#### Support

• for questions please contact us at support@auvidea.com